


# TRANSMISSION OIL COOLER


## COMPONENTS

AX

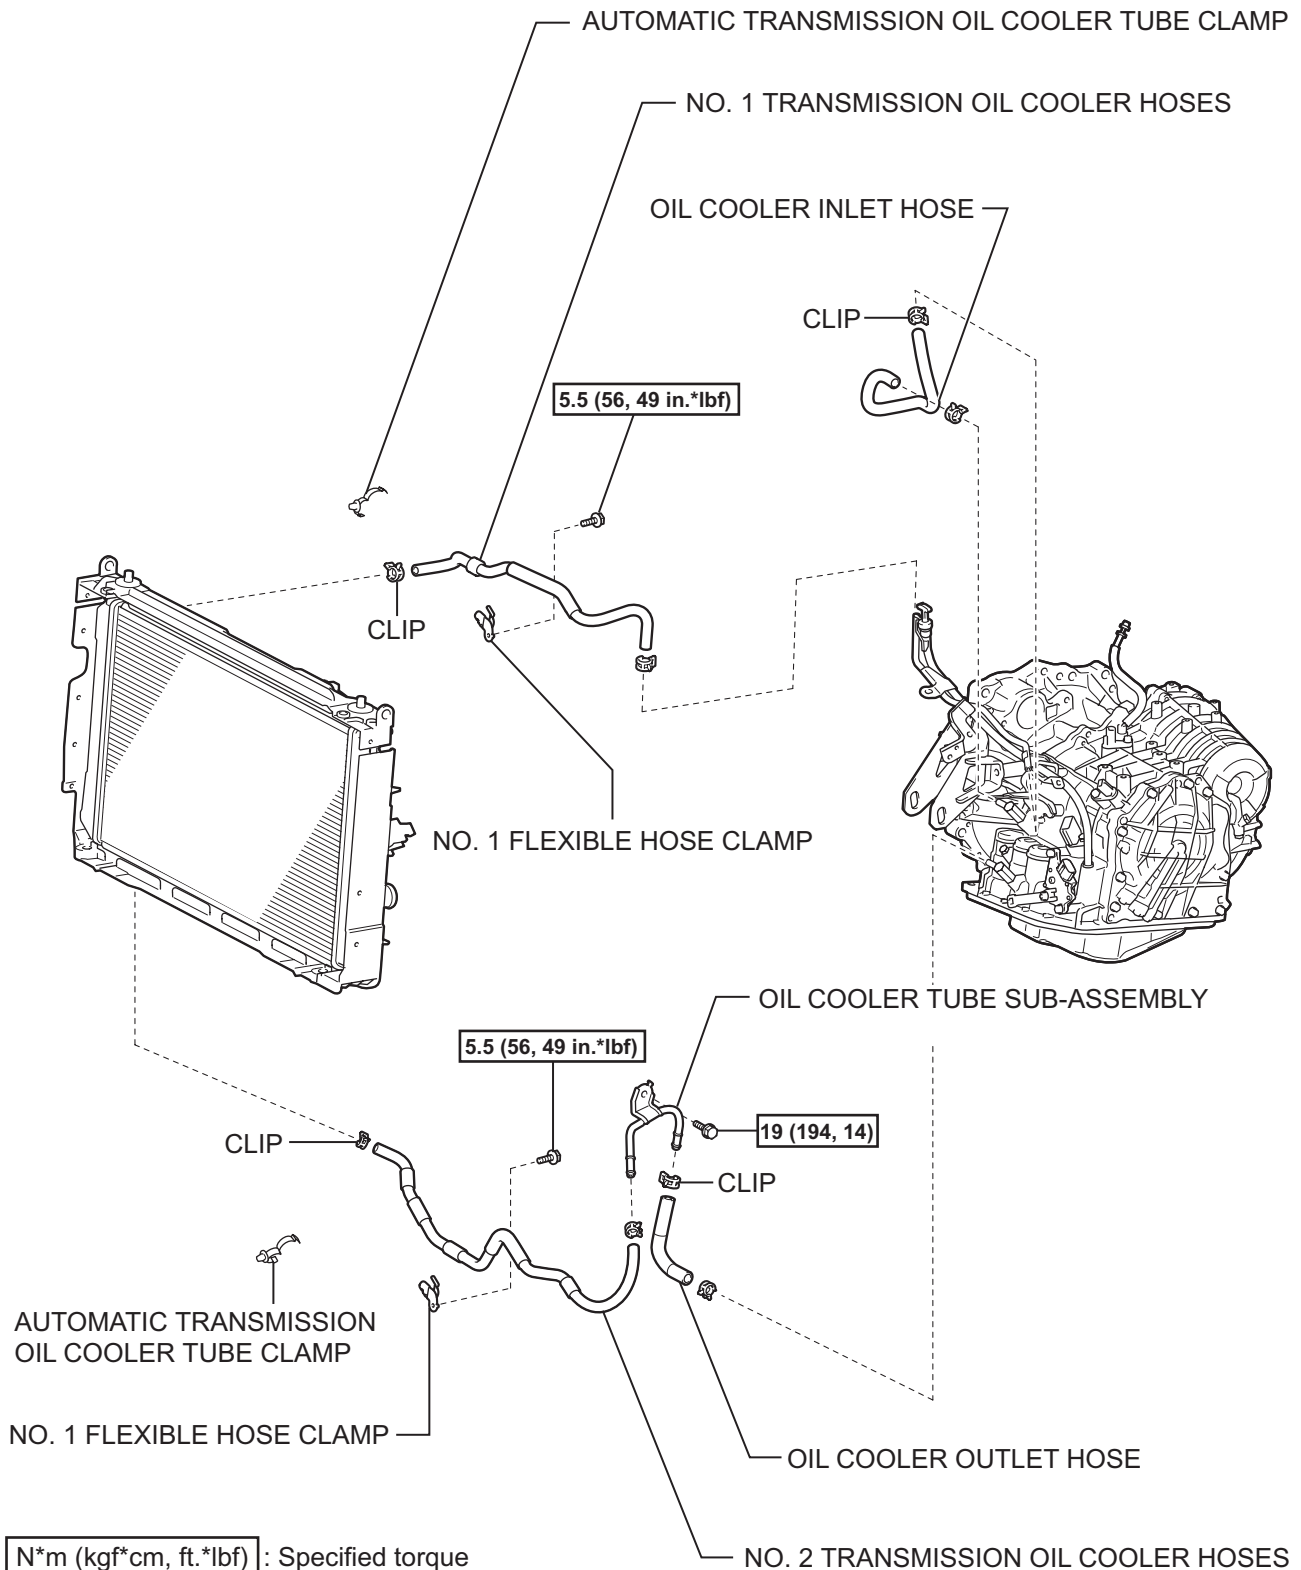


## REMOVAL

### 1. DISCONNECT NO. 1 AND NO. 2 TRANSMISSION OIL COOLER HOSES

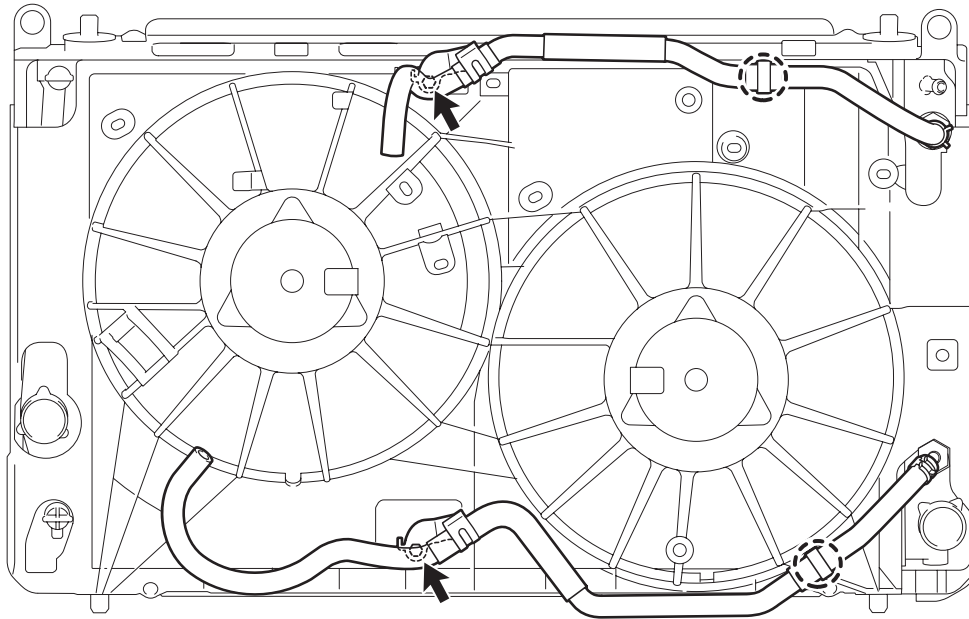


AX

- (a) Disconnect the 2 hoses from the 2 No. 1 flexible hose clamps.
- (b) Detach the 2 claws to open the 2 automatic transmission oil cooler tube clamps.
- (c) Disconnect the 2 hoses from the radiator.
- (d) Remove the 2 bolts and 2 No. 1 flexible hose clamps.
- (e) Remove the 2 automatic transmission oil cooler tube clamps.
- (f) Disconnect the 2 hoses from the transmission oil filler tube and oil cooler tube.

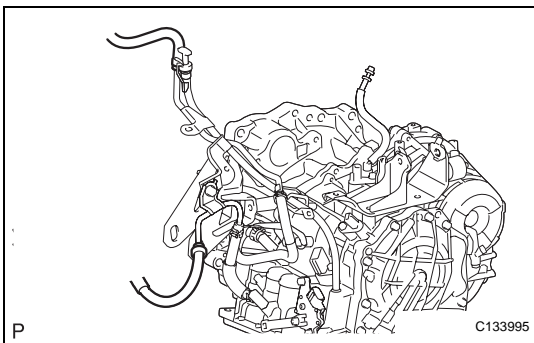

AX

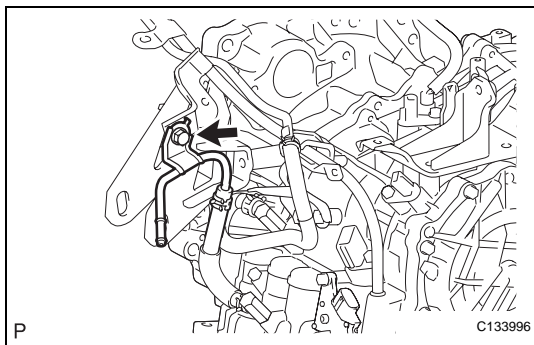


## 2. DISCONNECT OIL COOLER TUBE SUB-ASSEMBLY

- (a) Disconnect the oil cooler outlet hose from the oil cooler tube and transaxle.
- (b) Remove the bolt and oil cooler tube.

## 3. DISCONNECT OIL COOLER OUTLET HOSE

- (a) Disconnect the oil cooler outlet hose from the transaxle.

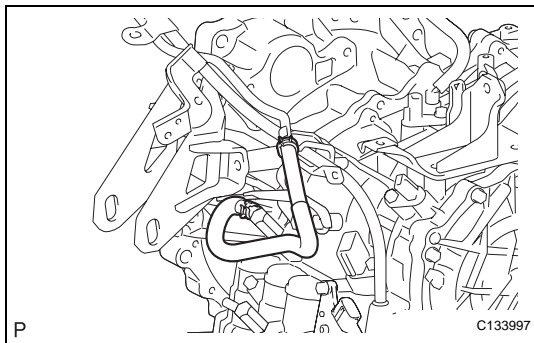


## 4. DISCONNECT OIL COOLER INLET HOSE

- (a) Disconnect the hose from the transmission oil filler tube and transaxle, and remove it.

# INSTALLATION

## 1. CONNECT OIL COOLER INLET HOSE

- (a) Connect the hose to the transaxle and transmission oil filler tube.

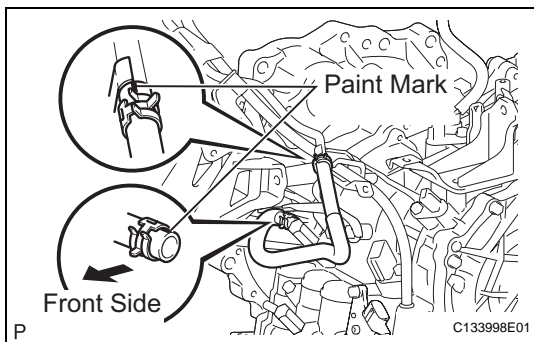


## 2. INSTALL OIL COOLER TUBE SUB-ASSEMBLY

- (a) Install the tube with the bolt.  
**Torque: 19 N\*m (194 kgf\*cm, 14 ft.\*lbf)**


### NOTICE:


**Make sure the rotation stopper of the tube contacts the top part of the front engine mounting bracket.**

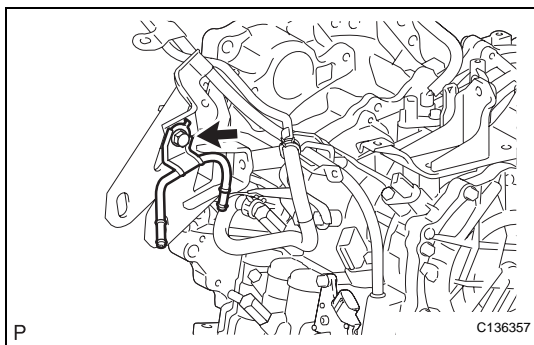

## 3. CONNECT OIL COOLER OUTLET HOSE


- (a) Connect the hose to the transaxle and oil cooler tube.

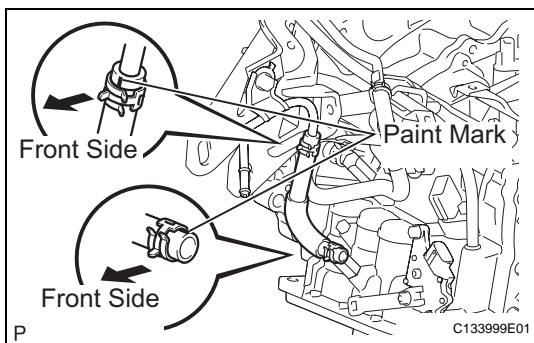

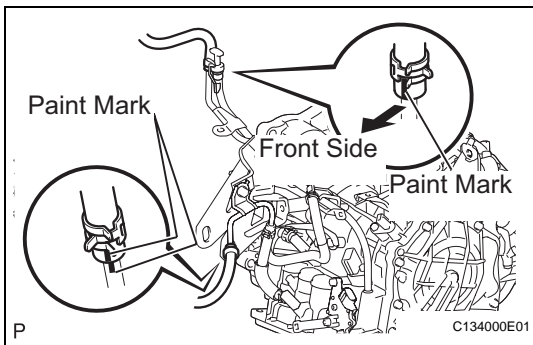

#### 4. CONNECT NO. 1 AND NO. 2 TRANSMISSION OIL COOLER HOSES

- Connect the 2 hoses to the transmission oil filler tube and oil cooler tube.
- Install the 2 automatic transmission oil cooler tube clamps to the radiator.

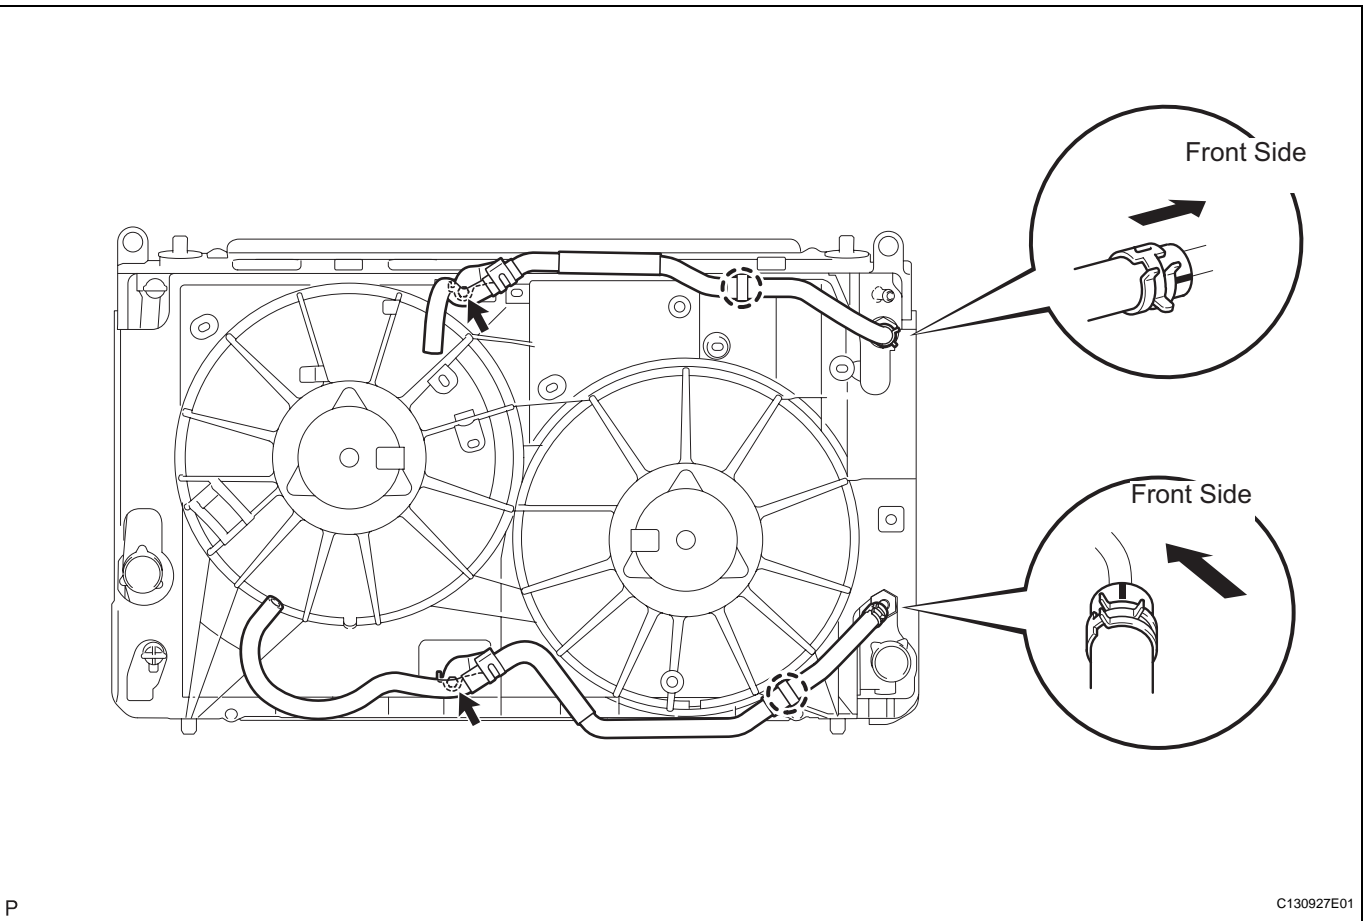

- Install the 2 No. 1 flexible hose clamps to the radiator with the 2 bolts.  
**Torque: 5.5 N\*m (56 kgf\*cm, 49 in.\*lbf)**
- Connect the 2 hoses to the radiator.
- Pass the 2 hoses through the 2 automatic transmission oil cooler tube clamps.
- Connect the 2 hoses to the 2 No. 1 flexible hose clamps, and close the 2 clamps.

#### 5. ADD AUTOMATIC TRANSAXLE FLUID

#### 6. INSPECT AUTOMATIC TRANSAXLE FLUID

- Inspect the automatic transaxle fluid (see page [AX-126](#)).